

## INSTALLATION INSTRUCTIONS FOR DRIFTWOOD LOG SETS AND RIVER ROCK SET

[For Use with Astria® CompassDLX and Compass Series and Superior® DRL2000 & DRL3500 Series DV Linear Fireplaces]

### KIT CONTENTS

1 ea. Log Set or River Rock Set  
1 ea. Instruction Sheet

### TOOLS NEEDED

None



### Contemporary Media Kits

Cat. No.	Model	Description
F4247	DWLS-RNCL35	Driftwood Log Set, RNCL - 35
F4251	DWLS-RNCL45	Driftwood Log Set, RNCL - 45
F3775	RIVROCK-25PK	River Rock - 25 Piece Kit - 35/45/55
F4442	DWLS-RNCL55	Driftwood Log Set, RNCL - 55

**Table 1**

### GENERAL INFORMATION

The Driftwood Log Set and River Rock Set are to be used as a decorative addition in contemporary fireplaces.

If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact your local distributor or dealer.

DO NOT attempt to install the logs and river rock until the appliance installation has been completed, the gas line connected and tested for leaks and the initial burner operation has been checked out.

**Read this instruction sheet in its entirety before beginning the installation.**

**ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.**

**SHUT DOWN THE APPLIANCE AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.**

### **⚠ WARNING**

**If contemporary media are not installed according to the installation instructions, flame impingement and improper combustion could occur and result in soot and/or excessive production of carbon monoxide (CO), a colorless, odorless, toxic gas.**

### PREPARING THE FIREPLACE FOR DRIFTWOOD LOG SET

#### INSTALLATION

1. To access the glass door securing latches, first remove facade assembly from fireplace.
2. Remove the screen barrier assembly.
3. Detach the two (2) door latches beneath the firebox floor.
4. Swing the bottom of the glass door away from the fireplace to a 45° angle.

### INSTALLING THE CONTEMPORARY MEDIA

**Install Driftwood Log Set, River rock or combination of both following instructions below.**


**IMPORTANT: Panels (if used) should be installed before any of the contemporary media are installed.**

1. Install the Driftwood Log Set (see installation instructions on Page 2 for 35" models, Page 3 for 45" models and Page 4 for 55" models).
2. Ensure that glass media remains spread in a thin layer behind burner and two layers (max) in front of burner and one layer over the burner. Leave the pilot area open and take care to not allow crushed glass to fall into between the pilot cover and burner.

**NOTE:** When installing log set or river rock, take care to NOT mound glass media.

**IMPORTANT: Be sure that burner flames do not impinge upon neither driftwood media or river rocks.**

**INSTALLATION INSTRUCTIONS, LOG PLACEMENT ONLY  
35" MODELS**

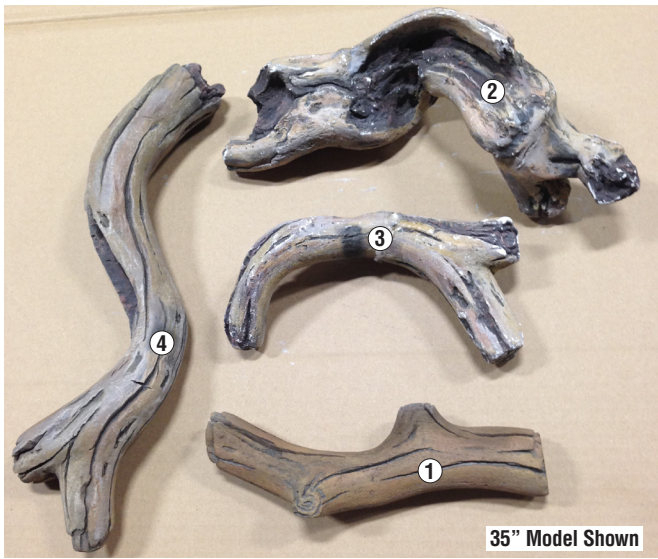

35" Model Shown

35" Driftwood Log Set	
Item #	Description
1	Rear Left Log
2	Rear Right Log
3	Left Front Log
4	Front Right Log

**Figure 1 - 35" Driftwood Log Set**

1. Place rear left log (1) behind burner up against rear wall (see **Figure 2**).



**Figure 2 - Place Rear Left Log (1)**

2. Place rear right log (2) against right and rear walls (see **Figure 3**).



**Figure 3 - Place Rear Right Log (2)**

3. Place left front log (3) against left wall and laying on front angled portion. (see **Figure 4**).



**Figure 4 - Place Left Front Log (3)**

4. Place front right log (4) in-between left front and right rear logs in front of the burner (see **Figure 5**).



**Figure 5 - Place Front Right Log (4)**

# INSTALLATION INSTRUCTIONS, LOG PLACEMENT ONLY 45" MODELS

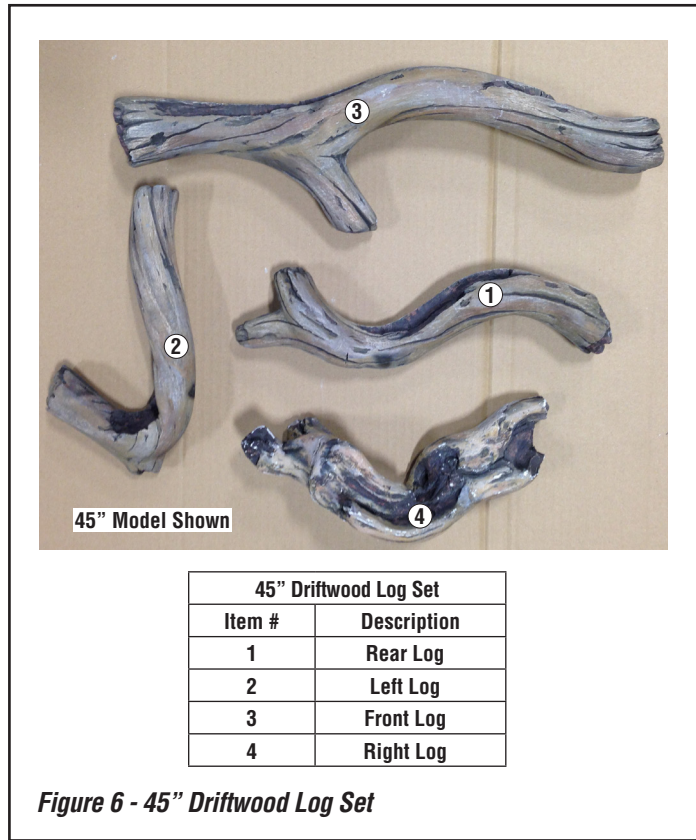


Figure 6 - 45" Driftwood Log Set

1. Place rear log (1) in center of fireplace leaning up against rear wall (see Figure 7).



Figure 7

2. Place left hand side log (2) wrapping around the burner (see Figure 8).



Figure 8 - Place Left Hand Side Log (2)

3. Place Front log (3) (see Figure 9).

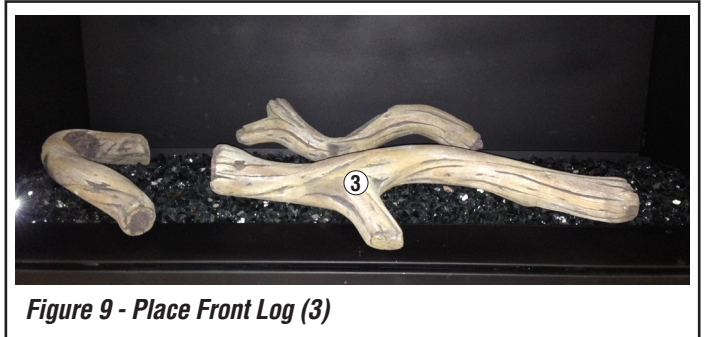



Figure 9 - Place Front Log (3)

4. Place right hand side log (4) wrapping around the burner (see Figure 10).



Figure 10 - Place Right Hand Side Log (4)

## INSTALLATION INSTRUCTIONS, LOG PLACEMENT ONLY 55" MODELS

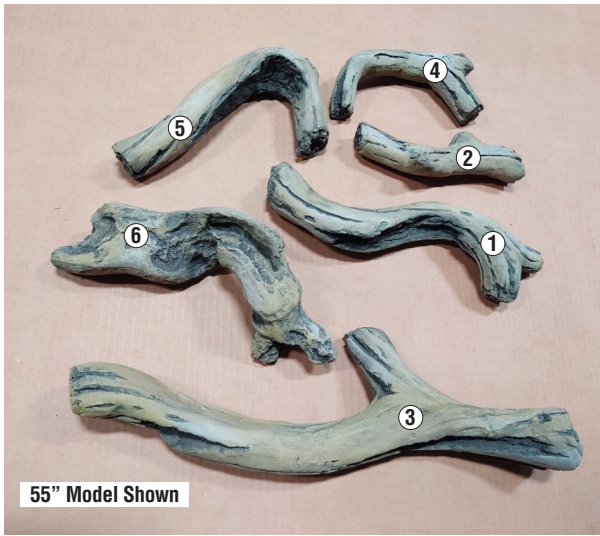

55" Driftwood Log Set	
Item #	Description
1	Left rear log
2	Right rear log
3	Front right log
4	Front left log
5	Right side log
6	Left side log

**Figure 11 - 55" Driftwood Log Set**

1. Place Right side log (# 5) parallel with side around burner.



**Figure 12**

2. Place Right rear log (# 2) behind burner and against rear wall.



**Figure 13**

3. Place Left rear log (# 1) behind burner and leaning against rear wall.



**Figure 14**

4. Place Left side log (# 6) around burner, against left wall and rear walls.



**Figure 15**

5. Place Front left log (# 4) in front of burner.



**Figure 16**


6. Place Front right log (# 3) in front of burner.



**Figure 17**

## INSTALLATION INSTRUCTIONS - ROCK PLACEMENT ONLY

1. Rocks can be placed anywhere on glass media provided no flame impingement occurs from burner flames (see typical installation shown in **Figure 18**).

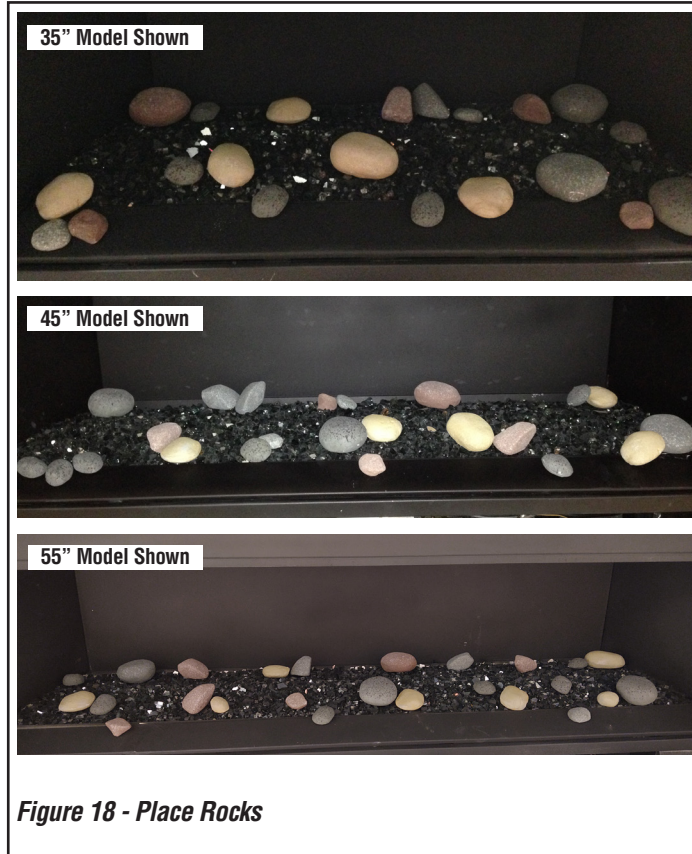

## INSTALLATION INSTRUCTIONS - ROCK AND LOG PLACEMENT

1. Follow log placement instructions guide (see **Page 2** for 35" models, **Page 3** for 45" models and **Page 4** for 55" models).
2. Place rocks around and/or on logs as desired provided no flame impingement occurs from burner flames (see typical installation shown in **Figure 19**).

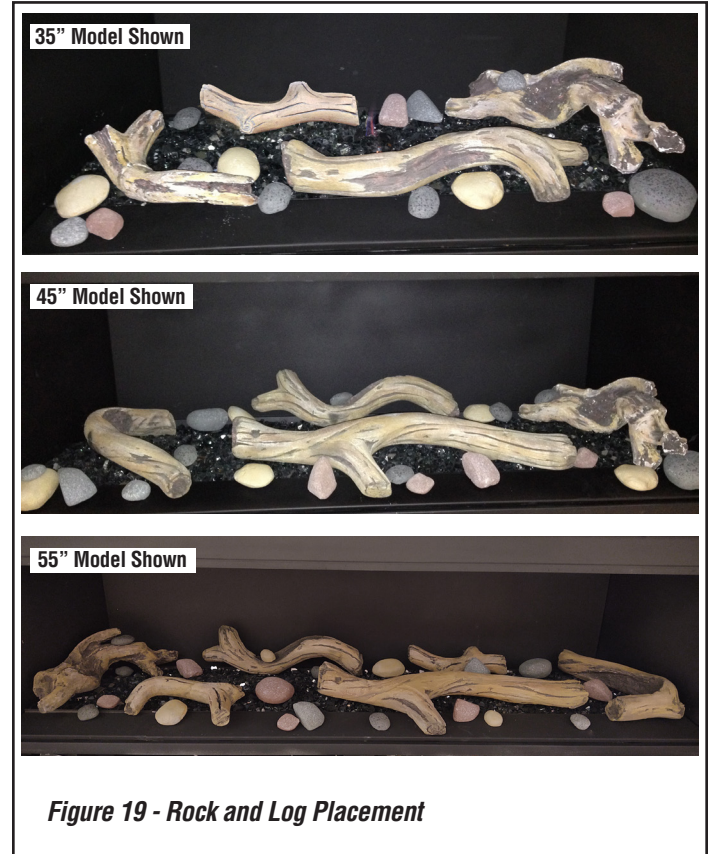




Figure 20 - Completed Installation

#### RE-INSTALLING THE GLASS DOOR, BARRIER, AND FACADE

1. Retrieve the glass door. Visually inspect the gasket on the backside of the frame. Gasket surface must be clean, free of irregularities and seated firmly.
2. Position the door in front of the firebox opening with the bottom of the door held away from the fireplace at a 45° angle. Hook the top flange of the door frame over the top of the firebox frame.

**NOTE:** Ensure the glass door is centered—with even spacing on each side.

3. Let the bottom of the glass door swing gently in towards the fireplace ensuring that the gasket seats evenly as the door draws shut. Securely fasten the door latches beneath the firebox floor to the door V-flange. **Note:** 35" & 45" units have 2 latches while the 55" unit has three latches.
4. Install the screen barrier assembly by hooking on the 4 bend out tabs.
5. Install the facade assembly to the front of the fireplace.

#### WARNING

**Reinstall any barrier removed before operating the fireplace. The barrier is designed to reduce the risk of burns from hot glass. Do not operate the fireplace without the barrier installed.**



NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

---

Innovative Hearth Products (IHP) reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.